
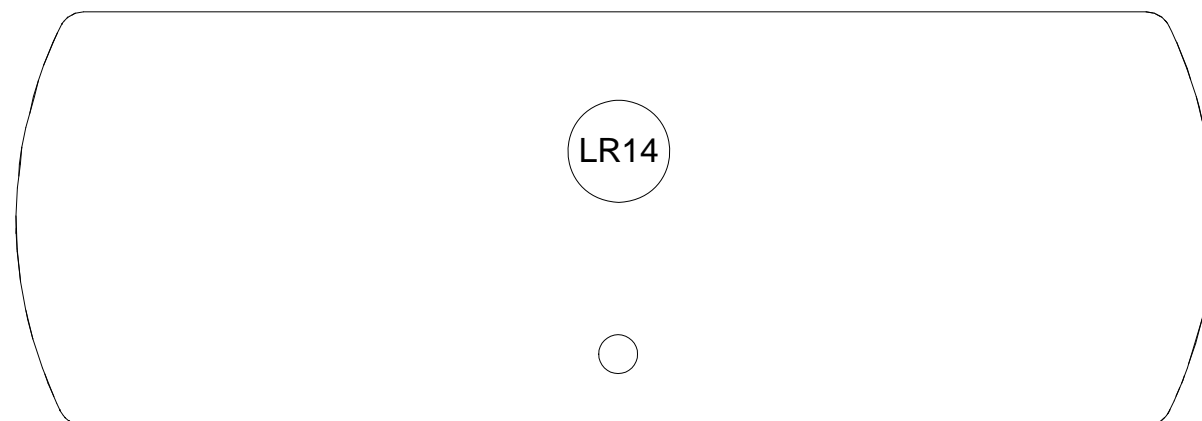
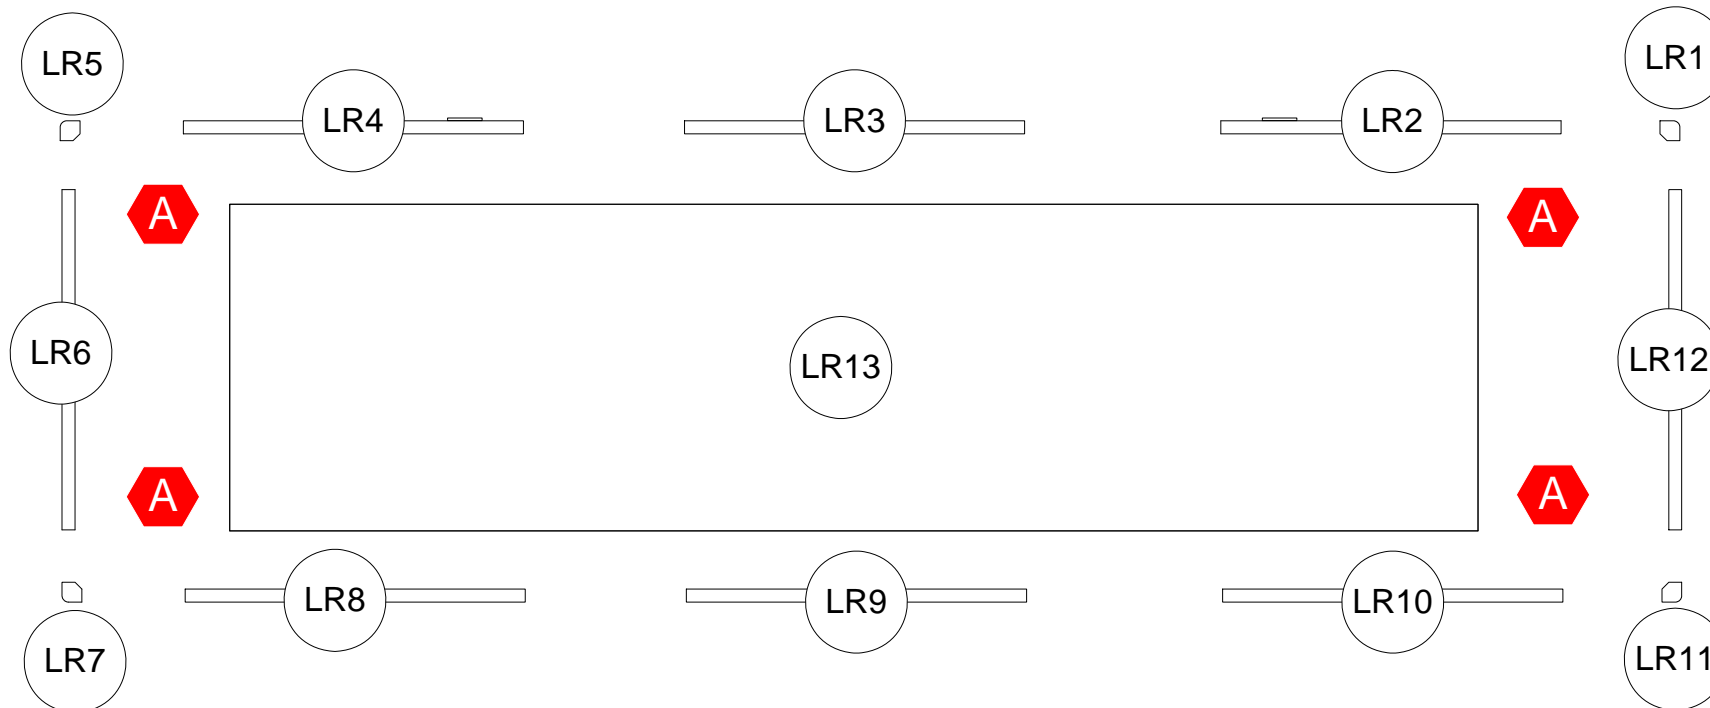


40" Rectangle Counter Assembly

Part #	Description
LR1,LR5,R7 & LR11	Platinum InterConnector-Round 90° Corner-1000mm
LR2	Platinum Cabinet Door - Flat Std: 500mm x 1000mm LEFTSIDE
LR4	Platinum Cabinet Door - Flat Std: 500mm x 1000mm RIGHTSIDE
LR6 & LR12	Platinum Panel - Flat Std: 413mm x 1000mm
LR3,LR8,LR9 & LR10	Platinum Panel - Flat Std: 500mm x 1000mm
LR14	DesignLine Counter Top - Rectangle
LR13	Platinum Internal Shelf - Rectangular

SO# _____

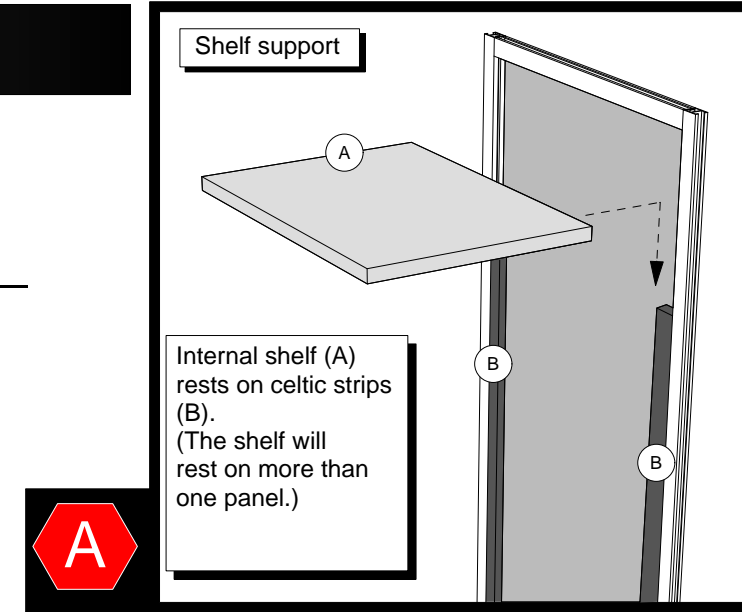

Step 1:

Working from left to right, assemble the Rectangle Counter starting with LR1 and continuing in number sequence ending with LR12.

Note: Once base level is complete, adjust the feet to ensure proper leveling.

Step 2:

The **internal shelf LR13** will rest on MDF strips, which is illustrated in **Detail A**.

Step 3:

Place the counter **LR14** on **top** of the base. immediately