



# Kit Assembly

## Step by Step

### Step 1.


Remove the graphic and X-TEND frame out of the carry bag.



### Step 2.

Extend the frame to the open position. The rods will snap into place to hold its form.


Make sure the 2 upper rods have a flush hook and the 2 lower rods have a offset hook. All 4 hooks should be in the forward position for graphic grommet ring application.

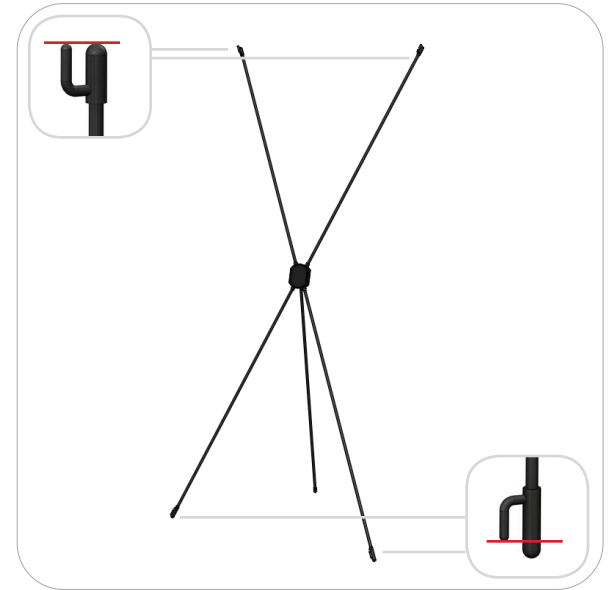

### Step 3.

Take the graphic and attach the 2 top grommets onto the upper rods. Make sure the artwork is facing forward and upright.

The X-TEND rods will start to flex and hold the graphic up with tension.

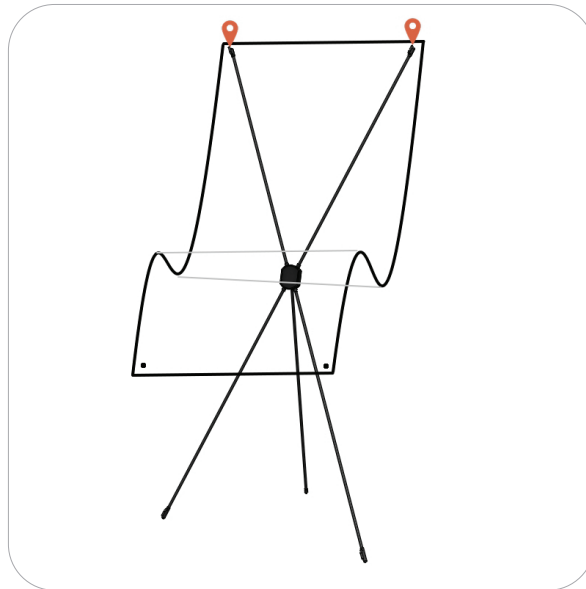

### Step 4.

Continue to attach the 2 bottom grommets onto the lower rods. The X-TEND rods will start to flex and hold the graphic in place with tension.

Setup is complete.

